

# 说明书



**D530V** 

最高亮度 1200 流明

#### 产品介绍

ORCATORCH D530V是一款专为水下摄影设计的潜水手电,最高亮度 1200流明。拥有140度强劲泛光,摄影无死角。钛合金侧按键开关,2档 调光、操作简单快捷;带电量指示功能,让您随时随地掌控剩余电量。

#### 产品特占

- ✓ 采用Cree LED, 高亮1200流明
- ✓ 使用一节18650锂离子充电电池
- ✓ 140° 强劲泛光
- ▼ 140 独划泛光✓ 钛合金侧键开关,操作便捷
- ↓ 申量指示灯设计。随心掌控使用状态
- ✓ 安全锁定功能,防止误触发
- ✓ 智能高温保护功能
- ✓ 专业抗压防水结构设计、潜水深度达150米
- ✓ 防反接设计, 防止电池反装对电路造成损害
- ✓ 电池过放保护功能
- ✓ 采用高强度航空级铝材
- ✓ 表面采用新一代钻石级抗腐蚀氧化处理
- ✓ 双面镀膜防刮抗压钢化玻璃镜片,深水抗压能力强

# 技术参数

ANSI/NEMAFL1	高亮档	低亮档
ゴゲ 亮度	1200流明	290流明
⑤ 续航时间	1小时24分	4小时36分
✔ 防跌落高度	1.5米	
~~~ 防水等级	水下150米	
工作电压范围	3-8.4 V	
尺寸	142mm(长) x 25.5mm(直径)x 35.5mm(筒头)	
净重	145g(不包括电池)	
附件	1节18650 USB 充电电池、手绳、O型圈	

注:以上参数按照国际手电筒测试标准ANSI/NEMA FL1所述测量方法,使用1节OrcaTorch 18650锂离子充电电池(3.7V,3400mah)在实验室环境中测试所得。测试参数为近似值,可能会随着手电、电池和使用环境而发生变化。

# 操作说明

- 1. 档位操作:按侧键开关,在高亮、低亮和关机之间切换。
- 2. 电量指示功能: 手电打开时, 指示灯会显示剩余电量
- -绿色: 高于 70% -橙色: 30%-70%
- -红色: 10%-30%
- -红色闪烁: 低于 10%
- 3. 安全锁定功能:任何状态下,长按侧键开关5秒,手电将关闭并且进入安全锁定状态,此时按侧键开关手电将无法打开,可双击侧按键解锁。(锁定或解锁的同时主灯将闪烁2次作为提示,锁定后按击开关时指示灯显示为每色)
- 5. 手电在不连续使用的情况下, 总续航时间将会显著延长。

#### 更换电池

- 1. 如图,将由池正极朝灯头方向,负极朝筒尾方向装入筒身;
- 2. 请勿反装, 以免造成手电和电池的损坏;
- 3. 请勿使用超申压申池, 以免损坏手申:
- 4. 请勿使用表面有破损或变形的电池,以免发生短路、爆炸、漏液等情况。



# 使用与维护

- ⋄由于海水具有腐蚀性,请在使用后用清水冲洗手电表面,并擦干水份。
- ◊ 请勿将手电放在沙地上,以防止细沙进入手电开关或螺纹缝隙。
- ⇒ 拧紧电筒所有连接处后方可入水。
- ◆ 每次潜水后请将电池取出。
- ⋄请勿拆卸灯具头部密封部件,否则将会导致保修失效并可能损坏灯具。
- ◇ 请使用优质电池,并且当长期不用灯具时将电池从灯具中取出,否则可能 因电池漏液或者爆炸,造成灯具损坏。

。长期使用后, 灯具的0型圈可能受到损坏。如果发现了这种情况,请您更 换0型圈以维持手电的防水性能。为保持0型圈(密封胶圈)及螺纹旋动顺 畅,请定期在其表面涂抹硅脂润滑。

请经常清洁灯具的导电接触面以保证灯具的正常工作,特别是当灯具出现异常的闪烁或者无法点亮的时候。以下是几个可能导致灯具出现异常的闪烁或者无法点亮的原因;

原因一: 由池由量不足, 需要更换。

解决方案: 更换由池 (装入新由池时请注意正负极方向)

原因二:螺纹或者PCB板的导电接触面或其他接触面/接触点被弄脏 て。

解决方案:用酒精棉签清洁导电接触面或接触点。

如果上述方法无效,请联系经销商并按照售后服务条款保修。

#### /口 /位 々 ⇒

- 一、30天包换期:本产品自售出之日起30天内,在正常使用情况下,出现 产品质量问题,客户可选择维修服务或者更换同型号同规格的新品。如同 型号同规格的产品停止生产或因其他原因不能在合理时间内安排更换,则 调换不低于原产品件能的同品牌产品。
- 二、1年免费保修期:本产品自售出之日起1年内,用户在正常使用情况下,出现产品质量问题,则享受免费维修服务。因使用不当或擅自改装、维修而引起的产品缺陷,损坏、不在保修范围内。
- 三、终身有限保修:在超过1年免费保修时间外,ORCATORCH将提供有偿保修服务,费用以实际更换材料费用为准,不另收取人工费用。

四、消费者保修时凭ORCATORCH《保修卡》、购物发票或收据、网上 购物时销售商提供的销售凭证与经销商联系,由经销商对消费者提供服 务、我公司将对经销商提供服务支持。

请通过官方网址 www.orcatorch.com 注册您的产品以获得1年延保。

警示:本产品亮度极高,请勿直视发光体,以免造成视力损伤。

# 深圳市拓飞电子有限公司

邮编: 518102



www.orcatorch.com



# User manual



D530V Max 1200 Lumens

#### PRODUCT INTRODUCTION

OrcaTorch D530V is a professional underwater video light with Max 1200 lumens output. It has 140 degrees super wide floodlighting with no blind angle for underwater photography. The light uses a titanium alloy side switch that offers 2 lighting modes, which allows for easy operation underwater. The LED indicator light located on the switch button also lets you know the battery's remaining charge.

#### PRODUCT FEATURES

- √ Uses CREE LED, max 1200 lumens
- √ Uses 1\*18650 Li-ion rechargeable battery
- √ 140° super wide beam angle
- √ Easy operation with side titanium alloy button switch
- √ Battery indicator
- √ Safe lock function, prevents mis-operation
- √ Intelligent Over-Heat protection
- √ Water pressure resistant construction .depth rated to 150 meters
- √ Reverse polarity protection, to protect from improper battery installation
- √ Over-discharge protection function
- √ Aircraft-grade high strength aluminum material
- √ The latest diamond grade hard-anodized seawater-corrosion-resistance
- √ Two sides coated toughened glass with high water pressure resistance under deep water

#### TECHNICAL PARAMETERS

ANSI/NEMAFL1	High	Low
≥" Coutput	1200 Lumens	290 Lumens
Nuntime	1h24min	4h36min
Impact Resistant	1.5m	
₩aterproof	under water 150m	
Working voltage	3-8.4 V	
Dimension	142mm(Length) x 25.5mm(Diameter) x 35.5mm(Head)	
Net weight	145g(excluding battery)	
Accessories	One USB rechargeable 18650 Li-ion battery, lanyard, O-rings	

Notice: Stated data has been measured according to the international flashlight test standards ANSI/NEMA FL1 using one OrgaTorch 18650 Li-jon battery (3.7V. 3400mah) under laboratory conditions. The parameters are approximate and may vary between flashlights, batteries, and environments.

#### OPERATION INSTRUCTIONS

- 1. Modes selection: Press side button to change among high, low, off,
- 2. Battery indicator: When the light is turned on, the battery indicator will be on to show the battery level.
- -Green: over 70%
- -Orange: 30%-70%
- -Red: 10%-30%
- -Flashing red: less than 10%
- 3. Safe lock function: Hold on the side switch for 5 seconds, the light will turn off and turn into a state of safe lock The side switch will be useless unless unlocking it by a double press.(The light will flicker twice when you lock or unlock the switch the battery indicator will be green when at state of locked.)
- 4. Intelligent Over-Heat protection: This torch is specially designed for underwater use. When used on land for too long, it might get too hot. But this torch would drop down its output automatically once its temperature reaches 65° to avoid damage to the light due to overheat.
- 5. The total runtime will be extended significantly if the light is used discontinuously.

#### BATTERY REPLACEMENT

- 1. As shown in the figure, insert the battery with the anode side (+) toward the light head.
- 2. Please do not reverse battery to avoid damage to the flashlight and
- 3. Please do not use battery with higher voltage than flashlight working
- 4. Please do not use battery with damaged surface or deformation to avoid short circuit, explosion, leakage, etc.



#### USAGE AND MAINTENANCE

- Please clean the surface of the light with fresh water and wipe it dry after use in case of the seawater corrosiveness.
- ♦ Do not drop or place the light on sand in case iron sand stick or go into switch section or screw thread

- Tighten all the connections of the light before going underwater.
- Please take out the batteries after each diving.
- Please don't disassemble the sealed head, doing so may cause damage to the flashlight and will void the warranty.
- We recommend the use of high quality batteries. If the flashlight will not be used for a long time, remove the batteries to avoid damage from electrolyte leakage or battery explosion.
- Please replace the O-rings if they are damaged after prolonged use and regularly lubricate the o-rings with silicon grease so as to not erode the rubber. Doing so will keep the flashlight properly sealed against water.
- Please clean the contacts of your light from time to time, especially when the light flickers or doesn't light up. There are probably several reasons for a flickering or not working light:
- Reason A: The batteries need to be replaced.

Solution: Replace batteries (Please confirm correct installation of + and terminals).

Reason B: The threads, PCB board contact or other contacts are dirty. Solution: Clean the contact points with an alcohol soaked cotton swab.

If the methods above don't work, please contact the distributors and refer to the warranty policy.

# PRODUCT WARRANTY

We will replace products afflicted with manufacturing defects within 30 days of purchase and repair a light free of charge within 12 months of purchase if problems develop under normal use; if repair is required after 12 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.

Please register your OrcaTorch products through official website www.orcatorch.com to get extra 1 year warranty.

#### Warning

The flashlight is high intensity lighting device and capable of causing eve damage, please avoid shining the light directly into the eyes.

#### ORCATORCH TECHNOLOGY LIMITED

Tel:+86-755-33560383 Fax:+86-755-29454989 Email: info@orcatorch.com www.orcatorch.com Address: 7F, Building 6, Rundongsheng Industrial Park, Gushu, Xixiang, Baoan, Shenzhen, China (518102)



www.orcatorch.com